

## Minolta Directions:

1. Turn on machine by flipping switch on right hand side of monitor
2. Holding film in left hand make sure film is unrolling across the top of reel then slide reel onto the left hand spindle make sure reel is pushed all the way back.
3. Pull out and up on the take up roll lever(with the black handle) thread end of film under the take up roll lever and push film until it reaches the take up reel on the right side.
4. On the control unit make sure knob is in the center and push the load button. If film does not load push film further around take up reel and hit load again.
5. Pull out the take up roll lever and push down.
6. Using control unit forward to your desired page.
7. To rotate page use knob at the bottom right of monitor.
8. To focus turn the gray wheel located above film.
9. To zoom in or out use knob at the bottom left of monitor.
10. To move page up and down use knob located on the left under the microfilm reel.
11. To print put a dime in the coin box on the left hand side of the machine and push the green print button. Print will appear underneath the machine.
12. When finished use the reverse knob to rewind film and pull reel off spindle.